

Brass manifold loop end caps

Project information

| | |
|--------------------------------|-----------------|
| Job name: | Location: |
| Engineer: | Date submitted: |
| Contractor: | Submitted by: |
| Manufacturer's representative: | Approved by: |

Technical data

| | |
|-----------------------|-------------------------------------|
| Material | Brass |
| Temp/pressure ratings | 73 °F (23 °C) at 160 psi (11 bar) |
| | 180 °F (82 °C) at 100 psi (6.9 bar) |
| | 200 °F (93 °C) at 80 psi (5.5 bar) |

Product information and application use

The Basic End Cap terminates the end of the TruFLOW™ Jr. Modular Manifolds. Required gaskets and o-rings are included.

The Brass Manifold Loop End Cap closes off unused QS20 loop connections.



| Part name | Part no. | End Type 1 | Prop 65 label required? |
|--|----------|------------|-------------------------|
| Brass Manifold Loop End Cap, R20 | A2080020 | ISO 228-G | - |
| Brass Manifold Loop End Cap Gasket, spare part | A2400020 | - | Yes |

| Part name | Part no. | Codes | Standards | Listings |
|------------------------------|----------|-------|-----------|----------|
| Brass manifold loop end caps | All | - | ASTM F877 | - |

| Installation | Related applications |
|---|-------------------------------------|
| The Basic End Cap threads onto one end of a brass manifold. The seal is aided by a gasket. Do not over-tighten. The Brass Manifold Loop End Cap threads onto a brass manifold outlet. The seal is aided by a gasket. Do not over-tighten. For more information, refer to the Uponor Radiant Installation Handbook. Available accessories: Basic End Cap Gasket, spare part (A2400032); Loop End Gasket, spare part (A2400020) | Radiant Heating and Cooling Systems |

| Footnotes | Contact information |
|-----------|---|
| - | <div>Uponor Inc. 5925 148th Street West Apple Valley, MN 55124 T 800.321.4739 F 952.891.2008</div> <div>Uponor Ltd. 6510 Kennedy Road Mississauga, ON L5T 2X4 T 888.594.7726 F 800.638.9517</div> |