

Basic end caps

Project Information

Job name:	Location:
Engineer:	Date submitted:
Contractor:	Submitted by:
Manufacturer's representative:	Approved by:

Product information and application use

The Basic End Cap terminates the end of the TruFLOW™ Jr. modular manifolds. Includes required gaskets and O-rings.

The Brass Manifold Loop End Cap closes off unused QS20 loop connections.



Part name	Part no.	A [Inch]	C [Inch]	E [Inch]	Material group	End Type 1	Operating Temperature 1 [°F]	Operating Temperature 2 [°F]	Operating Temperature 3 [°F]	B [Inch]	Subcomponent Material
Basic End Cap, R32	A2080032	2.13	2.13	0.625	Brass	ISO 228-G	73	180	200	-	-
TruFLOW Manifold Basic End Cap	A2611250	1.496	0.768	1.024	-	-	-	-	-	1.496	-
Basic End Cap Gasket, spare part, R32	A2400032	1.58	0.125	0.125	Brass	ISO 228-G	73	180	200	1.58	Dezincification Resistant Brass

Part name	Part no.	Prop 65 label required?	D [Inch]	Weight per UOM [lbs/UOM]
Basic End Cap, R32	A2080032	-	-	0.25
TruFLOW Manifold Basic End Cap	A2611250	-	0.354	-
Basic End Cap Gasket, spare part, R32	A2400032	Yes	-	0.01

Part name	Part no.	Codes	Standards	Listings
Basic end caps	All	-	ASTM F877	-

InstallationRelated applications

The Basic End Cap threads onto one end of a brass manifold. A gasket aids the seal. Do not over-tighten. The Brass Manifold Loop End Cap threads onto a brass manifold outlet. A gasket aids the seal. Do not over-tighten. For more information, refer to the Uponor Radiant Installation Handbook. Available accessories: Basic End Cap Gasket, spare part (A2400032); Loop End Gasket, spare part (A2400020).

Radiant Heating and Cooling Systems

Footnotes	Contact information
-	<div>Uponor Inc. 5925 148th Street West Apple Valley, MN 55124 T 800.321.4739 F 952.891.2008</div> <div>Uponor Ltd. 6510 Kennedy Road Mississauga, ON L5T 2X4 T 888.594.7726 F 800.638.9517</div>