

Tapas básicas

Project Information

| | |
|--------------------------------|-----------------|
| Job name: | Location: |
| Engineer: | Fecha de envío: |
| Contractor: | Presentada por: |
| Manufacturer's representative: | Approved by: |

Product information and application use

The Basic End Cap terminates the end of the TruFLOW™ Jr. modular manifolds. Includes required gaskets and O-rings.

The Brass Manifold Loop End Cap closes off unused QS20 loop connections.



| Part name | Part no. | Material group | End Type 1 | Subcomponent Material | Prop 65 label required? |
|---------------------------------------|----------|----------------|------------|---------------------------------|-------------------------|
| Basic End Cap, R32 | A2080032 | Brass | ISO 228-G | - | - |
| TruFLOW Manifold Basic End Cap | A2611250 | - | - | - | - |
| Basic End Cap Gasket, spare part, R32 | A2400032 | Brass | ISO 228-G | Dezincification Resistant Brass | Yes |

| Part name | Part no. | Codes | Standards | Listings |
|---------------|----------|-------|-----------|----------|
| Tapas básicas | All | - | ASTM F877 | - |

| Installation | Related applications |
|--|-------------------------------------|
| The Basic End Cap threads onto one end of a brass manifold. A gasket aids the seal. Do not over-tighten. The Brass Manifold Loop End Cap threads onto a brass manifold outlet. A gasket aids the seal. Do not over-tighten. For more information, refer to the Uponor Radiant Installation Handbook. Available accessories: Basic End Cap Gasket, spare part (A2400032); Loop End Gasket, spare part (A2400020). | Radiant Heating and Cooling Systems |

| Footnotes | Contact information |
|-----------|---|
| - | <div>Uponor Inc. 5925 148th Street West Apple Valley, MN 55124 T 800.321.4739 F 952.891.2008</div> <div>Uponor Ltd. 6510 Kennedy Road Mississauga, ON L5T 2X4 T 888.594.7726 F 800.638.9517</div> |