

© Copyright Uponor Limited
 Copyright in this drawing belongs to Uponor Limited.
 This drawing may not be used, sold, licensed,
 transferred, copied or reproduced in whole or in part or
 in any manner or form other than with the prior written
 consent of Uponor Limited.

Uponor
Electrical Schematic
 Smatrix Move
 Ref: SM-1.0A

Refer to the Quick Start Guide to setup pump and zone valve.
 Uponor reserve the right to alter specifications and operating parameters for all their systems at any time as part of their policy of continuous product development.

