

Acoplamientos TotalFit

Project Information


|                                |                 |
|--------------------------------|-----------------|
| Job name:                      | Location:       |
| Engineer:                      | Fecha de envío: |
| Contractor:                    | Presentada por: |
| Manufacturer's representative: | Approved by:    |

Technical data

|                         |  |
|-------------------------|--|
| Material                | Engineered Polymer   |
| Temp/pressure ratings   | 73 °F (23 °C) at 160 psi (11 bar)<br>180 °F (82 °C) at 100 psi (6.9 bar)<br>200 °F (93 °C) at 80 psi (5.5 bar) |
| Prop 65 label required? | No   |

Product information and application use

TotalFit™ is the professional-grade engineered polymer (EP) push-to-connect solution that provides greater value for residential projects with the same versatility and speed as brass push-to-connect fittings for PEX, PE-RT, CPVC, and copper piping systems.

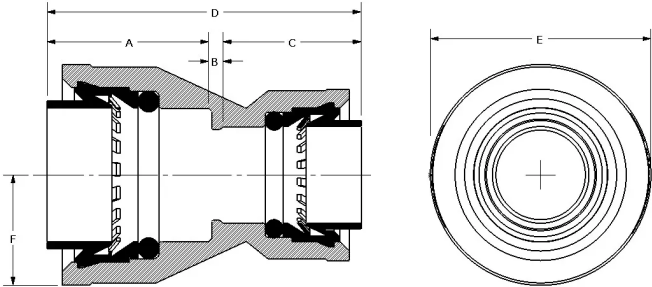

| Part name                     | Part no.  | End Type 1    | End Type 2    |
|-------------------------------|-----------|---------------|---------------|
| TotalFit Coupling, 1" x 1     | TF4771010 | TotalFit 1"   | TotalFit 1"   |
| TotalFit Coupling, 1/2" x 1/2 | TF4775050 | TotalFit 1/2" | TotalFit 1/2" |
| TotalFit Coupling, 1/2" x 3/4 | TF4775075 | TotalFit 1/2" | TotalFit 3/4" |
| TotalFit Coupling, 3/4" x 1   | TF4777510 | TotalFit 3/4" | TotalFit 1"   |
| TotalFit Coupling, 3/4" x 3/4 | TF4777575 | TotalFit 3/4" | TotalFit 3/4" |

| Part name   | Part no.  | Codes                                     | Standards  | Listings                                  |
|---|-----------|---|--|---|
| Acoplamientos TotalFit  | All       | UPC IRC IPC NPC of Canada UMC CMC CPC IMC | NSF/ANSI/CAN 372 ASTM F877 NSF/ANSI/CAN 61 NSF/ANSI 14 ASSE 1061 | IAPMO K-13573 IAPMO K-13571 IAPMO K-13572 |
| In addition, the following parts have additional codes, standards, or listings: |           |   |  |   |
| TotalFit Coupling, 1/2" x 3/4   | TF4775075 |   |  |   |
| TotalFit Coupling, 3/4" x 3/4   | TF4777575 |   |  |   |

Installation

Install on PEX, PE-RT, CPVC, and copper piping systems. Use deburr and depth tool to remove excess material or burrs and mark the appropriate depth on pipe. If using flexible PEX or PE-RT, install the insert inside the pipe first before making the connection. Refer to the Uponor TotalFit Instruction Sheet for additional information.

Related applications

Plumbing  
Hydronic Heating & Cooling

Footnotes

-

Contact information

Uponor Inc.  
5925 148th Street West  
Apple Valley, MN 55124  
T 800.321.4739  
F 952.891.2008

Uponor Ltd.  
6510 Kennedy Road  
Mississauga, ON L5T 2X4  
T 888.594.7726  
F 800.638.9517