
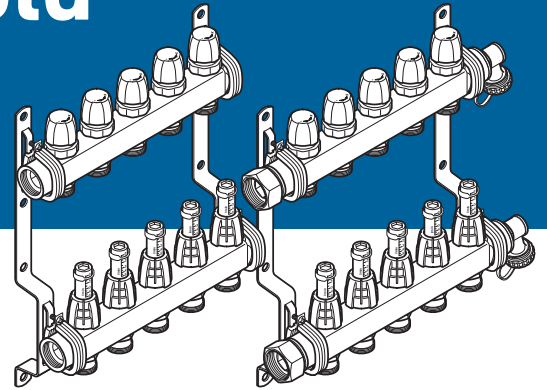



Uponor Vario S Manifold Instruction Sheet

Manifold Dimensions

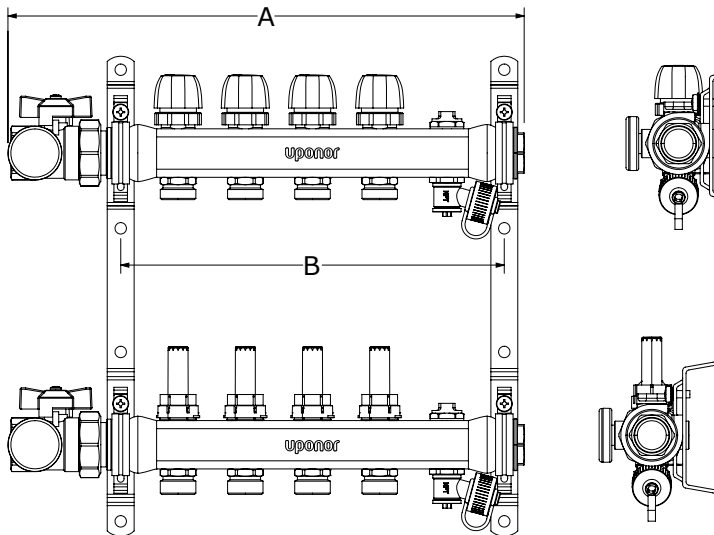

Manifold	A	B
A3700200	11.2"	7.3"
A3700300	13.1"	9.3"
A3700400	15.1"	11.2"
A3700500	17.1"	13.2"
A3700600	19.1"	15.2"
A3700700	21"	17.1"
A3700800	23"	19.1"
A3701000	27"	23"
A3701200	31"	27"


Manifold Mounting

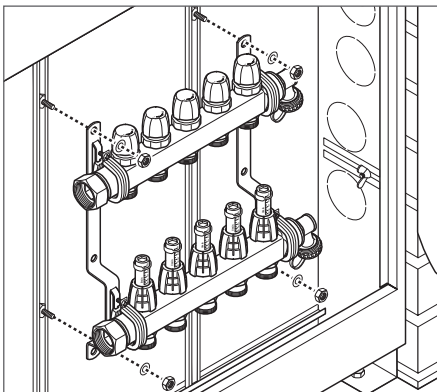

Pipe Connections




ProPEX®

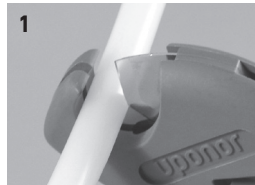

Square cut the pipe.

Couper le tuyau PEX à l'équerre.

Corte la tubería PEX en ángulo recto.

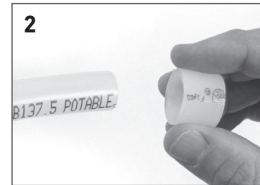

Slide ProPEX Ring onto pipe until it reaches stop edge.

Glisser la bague ProPEX sur l'extrémité du tuyau jusqu'au bord d'arrêt.

Deslice el anillo ProPEX sobre el extremo de la tubería hasta alcanzar el borde de tope.




Expand pipe and ring.





Dilataz le tuyau et l'anneau.

Expandir la tubería y el anillo.



QS-Style Compression

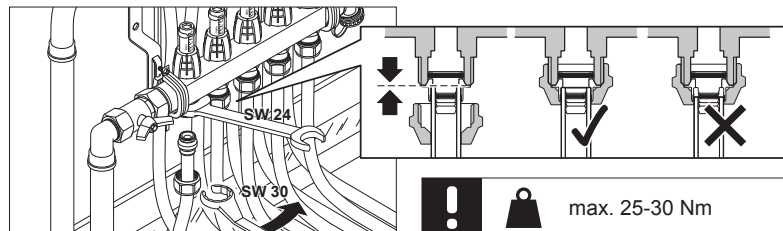

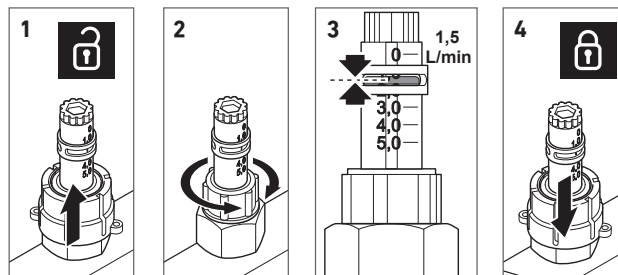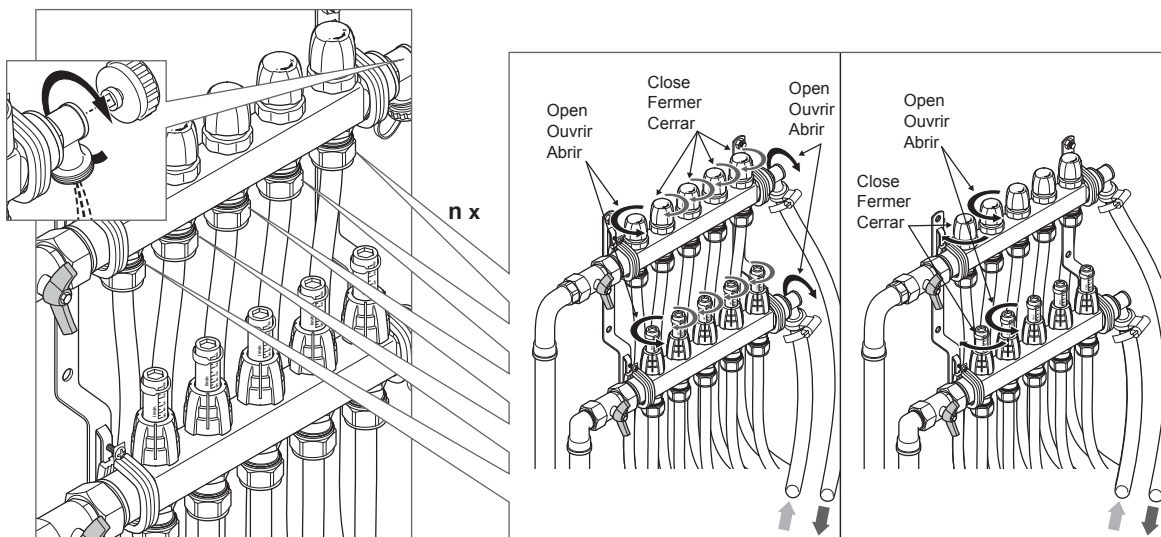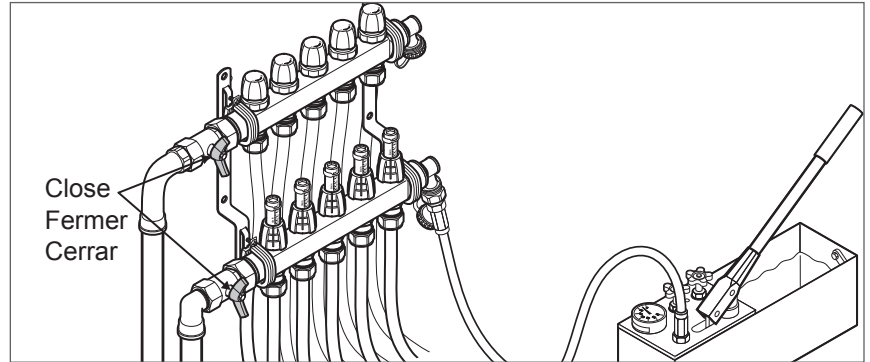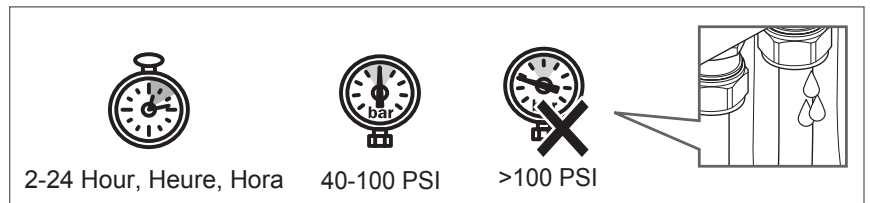

Excellence
in **Flow**⁺ Learn more at uponor.com



5925 148th Street West
Apple Valley, MN 55124
USA

6510 Kennedy Road
Mississauga, ON L5T 2X4
CANADA

T 888 994 7726
F 800 638 9517

+GF+ uponor