


Timer I-35





Power Supply	Terminal output	Maximum cable length	Operating temperature	Storage temperature	IP	Dimensions
Stromversorgung	Anschluss	Maximale Leitungslänge	Betriebstemperatur	Lagertemperatur	IP	Maße
Alimentation électrique	Bornier de raccordement	Longueur de câble maximale	Température de fonctionnement	Température de stockage	IP	Dimensions
Energievoorziening	Uitgangsspanning	Maximale kabellengte	Bedrijfstemperatuur	Opslagtemperatuur	IP	Afmetingen
Alimentazione	Tipo di connettore	Lunghezza massima del cavo	Temperatura di esercizio	Temperatura di stoccaggio	IP	Dimensioni
Fuente de alimentación	Connxión Salida	Longitud máxima del cable	Temperatura de funcionamiento	Temperatura de almacenamiento	IP	Dimensiones
Alimentação eléctrica	Terminal de saída	Comprimento máximo de cabo	Temperatura de funcionamento	Temperatura de armazenamento	IP	Dimensões
Strömförsörjning	Anslutnings kabel	Maximal kabellängd	Drifttemperatur	Temperatura de armazenamento	IP	Dimensions
Strømforsyning	Sentral utgang	Maksimal kabellengde	Drifttemperatur	Förvaringstemperatur	IP	Dimensjoner
Strømforsyning	Ledningsklemme	Maksimal ledningslængde	Driftstemperatur	Opbevaringstemperatur	IP	Dimensioner
Virtalähde	Litähätä	Kaapelin maksimipituus	Käyttölämpötila	Varastointilämpötila	IP	Mitat
2 AA 1,5V	RJ9	5m	0°C - 40°C	-20°C - 70°C	IP30	115x82x35mm

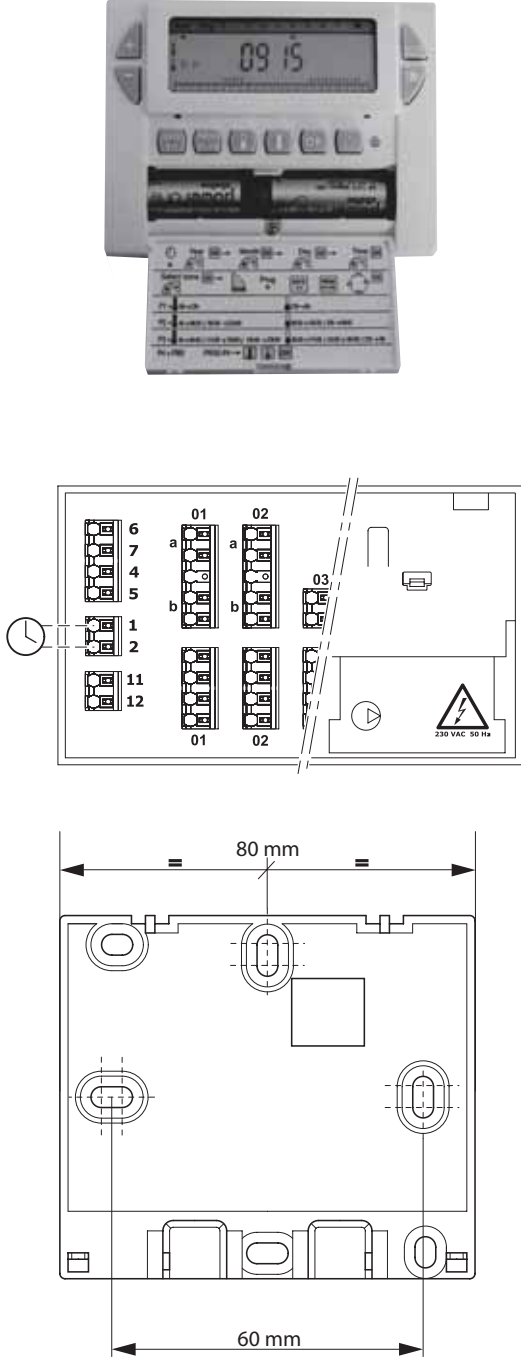


I-35|Timer *1| - Uponor Control System Wired



This Timer I-35 has been designed to offer you comfort and energy savings. [3]It allows you to programme your heating according to *1 temperature levels]:

- {"Comfort"} temperature: this is the temperature for your periods of presence.
- {"ECO"} temperature: this is the temperature for your brief absences or during the night.
- {"Frost-protection"} temperature: this is the minimum temperature for long absences. It protects your dwelling from the risk of frost.

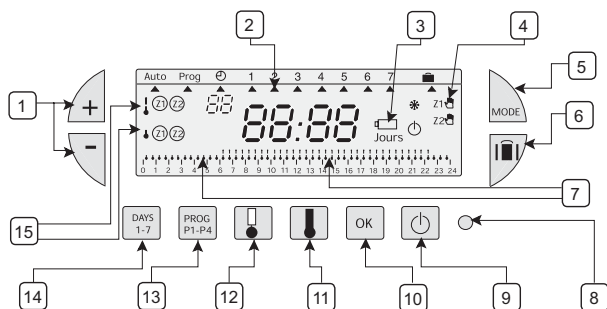


- | | |
|---|---|
| 1 +/- *1 buttons for adjusting settings | 9 ON/OFF |
| 2 Pointer indicating day of the week | 10 Validation |
| 3 Warning light to indicate battery wear | 11 Comfort period selection |
| 4 Manual mode | 12 ECO period selection |
| 5 Mode selection | 13 P1 to P4 prog selection |
| 6 Prolonged absence mode (holidays) | 14 Days of the week selection (1=Monday, etc.) |
| 7 Viewing of "Comfort" and "ECO" periods | 15 Indicator for current temperature level on each zone |
| 8 Reset | |

1. Inserting or re-inserting the batteries

The Timer I-35 is equipped with a warning light to indicate when the batteries need replacing. [1.5V AA,2]As soon as this indicator lights up at the bottom right-hand side of the display panel, replace the batteries (use two *1 alkaline batteries – life is approximately *2 years)]. [2]The battery changeover should not last more than *1 minutes|. Otherwise programming is lost.

2. Setting to current time and day



Before beginning the programming of the device, please slide cover down and press {RESET} with the tip of a pen.

You are putting the device into operation for the first time. You have just pressed the RESET button (see above).

1. |Select the year using *1 buttons|.
2. |Confirm with *1|.
3. |Select the month using *1 buttons|.
4. |Confirm with *1|.
5. |Select the day using *1 buttons|
(A pointer will indicate the corresponding day of the week).
6. |Confirm with *1|.
7. |Select time using *1 buttons|.
8. |Confirm with *1|.

After time setting confirmation, the programmer switches into automatic mode.



9. |If you wish to change the time or the day, press *1 button until the pointer appears under the clock symbol and proceed as above|.

3. Programming


|4|You can programme your week according to *1 programme settings|:

|P1,P2,P3|*1, *2, *3 are pre-recorded and cannot be modified|.

|P4|*1 is blank and allows you to create a personalized programme varying according to the day of the week for each zone|.




|P2,7|The standard allocation of *1 is to *2 days of the week|. If this corresponds to your life style, stay in automatic mode. Otherwise, continue.



P4 = |30|Blank programme allowing you to create periods of Comfort and ECO (*1 min. minimum) for each day of the week and each zone|.

|In automatic mode, select the zone you wish to program with buttons *1|. The selected zone is indicated: |Z2|(example *1)|.



To program your week according to pre-registered programs.

|In automatic mode, select the zone you wish to program with buttons *1|. The selected zone is indicated: |Z1|(example *1)|.

|To switch to programming mode, press button *1 until the pointer appears under Prog|. The display indicates the zone you are programming and the program number.



|Press button *1 until a pointer appears under the day you wish to programme|.

|Press button *1 to select your program|.

|Press button *1 to validate|. The following day is automatically proposed.

|2, |Press *1 times on button *2 to return to automatic mode|.

|P4|To create a *1 program|

|24,48|A *1-hour profile composed of *2 "thermometers" at the bottom of the display panel allows your programme composition to be easily viewed|.

|3|Example - programming *1 temperature periods for Friday|:

|6,8,2,6,10|*1 a.m. till *2 a.m., noon till *3 p.m. and *4 p.m. till *5 p.m.|

| P4|Press button *1 until the *2 programme number flashes in the right side of the screen|. |24|Your display panel indicates time as 00:00 and the first thermometer flashes on the *1-hour profile|.

| |Press button *1 several times to obtain a period of ECO mode|.

| |Press button *1 several times to obtain a period of comfort mode|. |30|The time displayed advances by *1 minutes for each short press|. Repeat this action as many time as you wish to obtain the period of ECO or comfort mode|.

Note:

|11:30,12:00, , , |If you make a mistake (e.g. *1 instead of *2) use *3 buttons to advance or return and correct with *4 or *5|.

| |Press button *1 to validate|. The following day is automatically proposed|.

|2, |Press *1 times on button *2 to return to automatic mode|.

Note:

|P4,P4|When programming a new *1 program, the Timer I-35 will automatically propose y the previous programmed *2|.

| |To program another zone, select it with *1 buttons in automatic mode and then switch to programming mode (Mode button)|.

4. PROGRAMME READING


You can check your programming.

1. | |In automatic mode, select the zone you wish to program with buttons *1|. The selected zone is indicated: |Z1|(example *1)|.



2. | |Press on button *1 until the pointer indicates Prog|.

3. |, 1,7,24|Press button *1 to select the day from *2 to *3 and check your programming on the *4-hour profile at the bottom of the display panel (see example above)|.



Time displayed correspond to the beginning of the first comfort period.



4. |2, |Press *1 times on button *2 to return to automatic mode|.

5. "AUTO" AUTOMATIC MODE

|, AUTO|You pass into automatic mode by pressing the button *1 until the pointer appears under "2"|.

In automatic mode the timer displays time, day and the temperature level on each zone.

|24|The program applied is displayed on the *1-hour profile at the bottom of the display panel|.


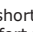
6. TEMPORARY OVERRIDE

This function allows temporary modification of set-point on a zone.



Example: |1|on zone *1, the temperature level is comfort and you want to switch to ECO|.

1. |1, |Select zone *1 with buttons *2|. The selected zone is indicated|.




2. |1|A short press on the "ECO" button *1 will switch zone *2 temperature level from comfort to ECO|. |2|The *1 display will start to blink|.




||This modification will end at the next program step or by pressing *1 or *2|.


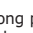
7. Permanent override


This function allows permanent modification of set-point.

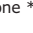

Example: |2|zone *1 is in ECO mode and you want to switch it permanently to comfort|.

1. ||Select zone *1 with buttons *2|. The selected zone is indicated.


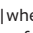


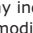2. ||,2|A long press on comfort button *1 will permanently switch zone *2 temperature level from ECO to comfort|.


|22|The display indicates *1 and a "hand" symbol|.

||This modification will end after a short press on button *1 or *2|.




Note: ||when a zone is in comfort mode, it is possible to make a permanent override into comfort mode by pressing on button *1 (same procedure for ECO mode with button *2)|.



8. Switch OFF the installation

|A pressure on button *1 will switch off the installation|. The timer will display time and day of the week. When the timer is switched off, permanent and temporary overrides are cancelled.


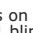
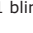
|To switch to automatic mode, press *1|.




9. PROLONGED ABSENCE MODE (HOLIDAYS)
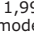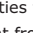
|1,99|This mode protects your dwelling from freezing by applying the frost protection mode on the two zones during your absences {(from *1 to *2 days)}|. You can programme the length of your absence so that the temperature rises for your return. |*1 possibilities to apply the frost protection mode|.


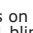
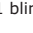
1. Permanent frost protection mode.




||Press on button *1|. |1|Day *1 blinks|.


|Press on button *1|. The display indicates Forc|.

|Confirm with *1|.

2. Frost protection mode for a number of days.

||Press on button *1|. |1|Day *1 blinks|.


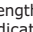
|1,99|Set the length of your absences in days (from *1 to *2), the current day counts as one|. The pointer indicates the day of your return.

The timer switch automatically to Auto at the end of the programmed period.

|Confirm with *1|.

|To stop frost protection mode and switch manually to automatic mode, press *1|.

10. POSSIBLE SETTINGS

The following setting can be made on the back of the device (when it is not mounted).



automatic change summer / winter time activated.



automatic change summer / winter time not activated.